


NOTES:

1. APPLY TEFLON TAPE TO ALL THREADED CONNECTIONS.
2. PLACE BUBBLER AT EDGE OF ROOT BALL.
3. INSTALL BUBBLER ON UPHILL SIDE OF PLANT IN SLOPED AREAS.

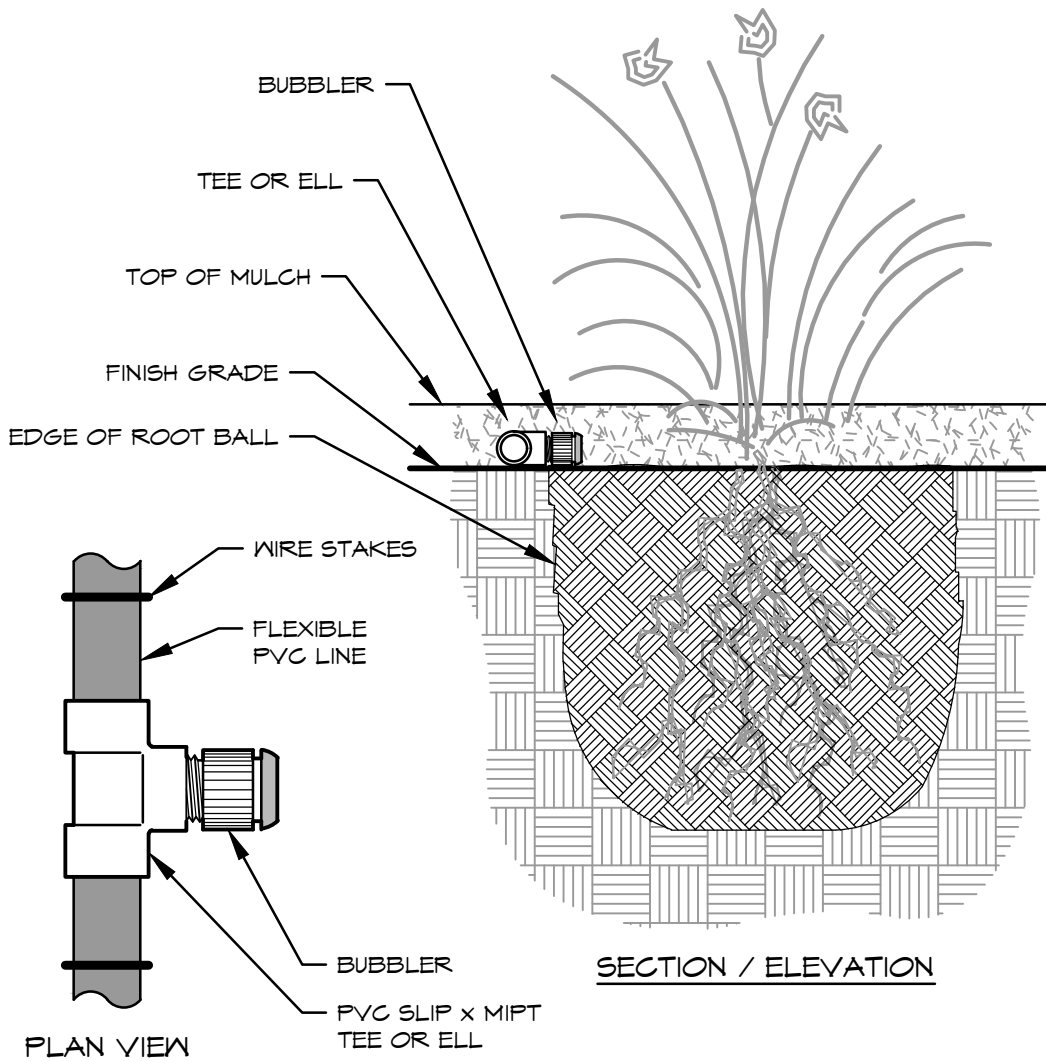

G-43

BUBBLER (W/ ON-GRADE

FLEXIBLE PVC SUPPLY TUBING)

G-43 v.1

2/11/15