1. DRILL ONE 1-3/8"Φ HOLE IN CENTER OF POT & SAUCER TO ACCEPT POT DRAIN PIPE.
2. DRILL 1"Φ HOLE FOR EACH FLEX. PVC HOSE.
3. INSTALL THE NUMBER OF BUBBLERS TO EACH POT AS LISTED IN THE IRRIGATION LEGEND.
4. EQUALLY SPACE BUBBLERS AROUND THE POT.

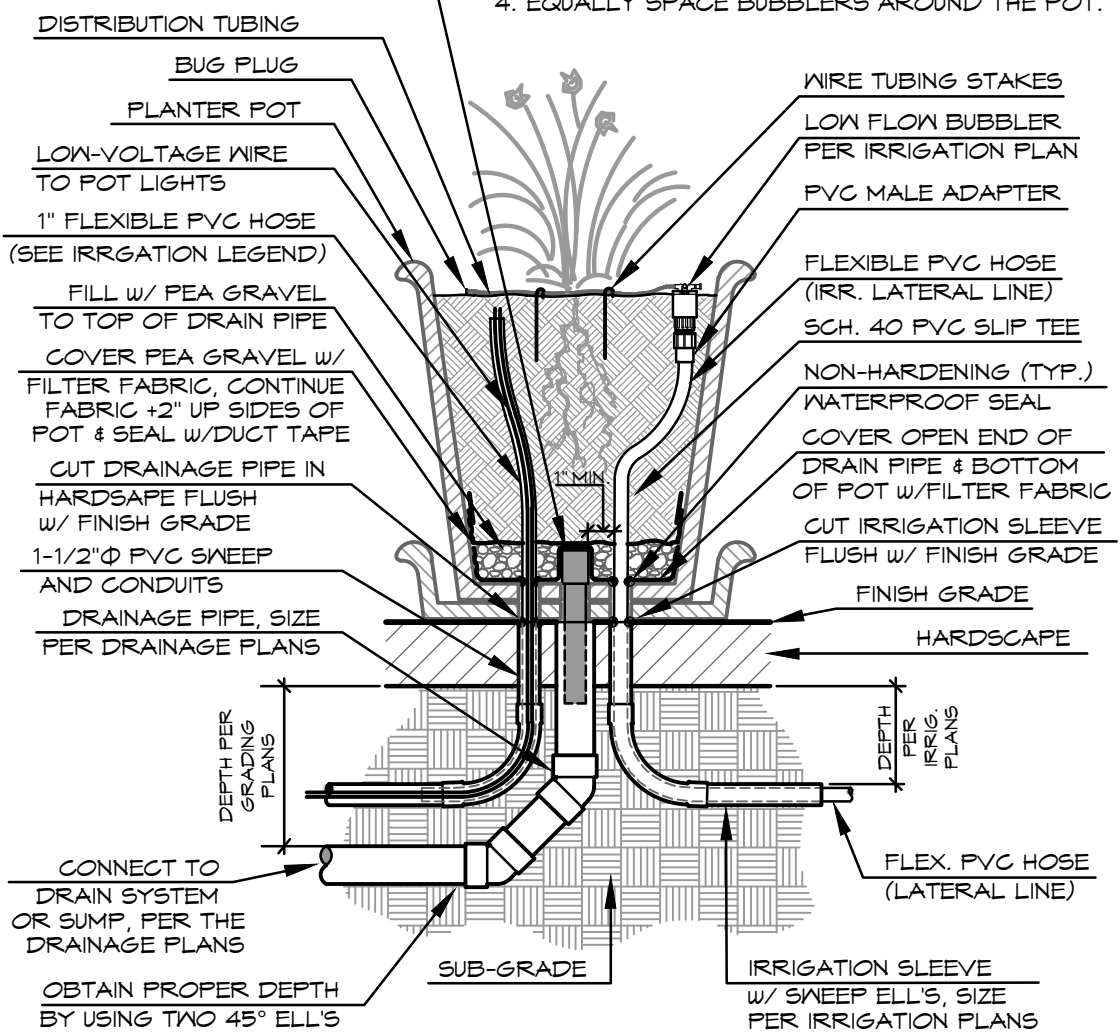

G-85

POT ON HARDSCAPE W/ BUBBLERS & LIGHTING (END OF RUN)

G-85 v.3
2/2/18